

## **EU DECLARATION OF CONFORMITY**



Copreci S.Coop.
Araba Ibilbidea, 3
E-20550 Aretxabaleta-GIPUZKOA (Spain)
Tlfn: + 34 943034499

Declare under our sole responsibility that the product:

Model	PIN AENOR	Description
SOV MODEL D (DUAL)	99DP1037	Mechanically operated shut off valve for gas burning
SOV MODEL S (SINGLE)		appliances

To which this declaration relates is in compliance with the regulation UE 2016/426 of the European parliament on appliances burning gaseous fuels

And comply with the standards listed below

- EU/2016/426 A III B (09.03.2016)
- EN 1106 (01.09.2010)
- EN 13611:2019
- ROHS Directive 2011/65/EU and amendment 2015/863/EU

The notified body AENOR (0099) (C/Génova, 6, 28004 Madrid-España) performed the evaluation of the conformity procedure with the type based on the product quality assurance in accordance with the provisions of module E and issued the A01/002180 certificate, on 2021/10/13.

This certificate is valid from 2024.02.15

Iñigo Peñagarikano Copreci, S. Coop.

Laboratory Manager

Instructions for installation of the product subject to this declaration:

"Consult the instructions before using this device. Installation must meet the regulations in force"

## 1. Technical instructions for the installer.

INSTRUCTIONS SOV		
MODEL	SOV Model D and model	
GROUP	1	
PURPOSE	Free Standing Cookers	
CHARACTERISTICS	Number of ways: 2 or 1 Outlets Maximum pressure: 100 mbar Reference flow: 2,4 m3/h fully open, with air at 20mbar and 1 mbar pressure drop Nominal diameter: 15 Range of Ta: 0°C to 130°C	
NUMBER OF MECHANICAL CYCLES	10.000 cycles	
MOUNTING POSITION	Appliance Inlet	
RANGE OF PRESSURES IN MB	8- 100 mbar	
CONNECTIONS	Inlet: Joint, Male G1/2 Outlet: Joint Female G1/2 and Biconic	
GAS TYPE	1st, 2nd y 3th families	
TORQUE OF FITTING OUTLET (max)	35 Nm (Taps Outlet) 12 Nm (Oven Outlet)	
TORQUE OF FITTING INLET (max)	55 Nm	
TORQUE OF 8 LATERAL HOLES (max)	1,4 Nm	
TURNING OF 2 UPPER HOLES (max)	1.2Nm	

## 2. Instruction manual for use and maintenance intended for the user.

- Component does not require any maintenance. Washing the valve with soapy water or other products may involve deterioration.
- > Do not pour liquids into the component.
- The appliance can only be switched on in the user's presence.
- The component must not be manipulated or repaired in any way.
- ➤ In case of malfunction, the manufacturer of the appliance and its specialized technical service carries out the replacement of the component.
- ➤ Not necessary transformation of the component to use another gas.
- > The installer must check the suitability of the component functions for the intended use.
- An inlet strainer must be fitted to prevent the ingress of foreign material (hole dimension not exceeding 1,5mm and prevent the passage of 1 mm diameter pin gauge).